


5. Obstacle Detection


Dino will make a turn to avoid obstacles in front of him automatically.

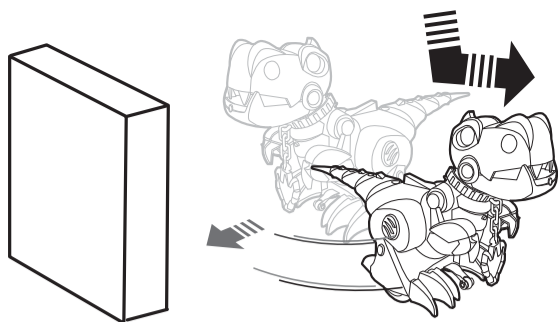

Note :
Obstacle detection performance may vary from different colors and material reflection of the object. The sensor would have has best performance in light color material.

6. Special tricks

In mild mode, touch Dino's forehead before you can play special tricks with it for 20 seconds.

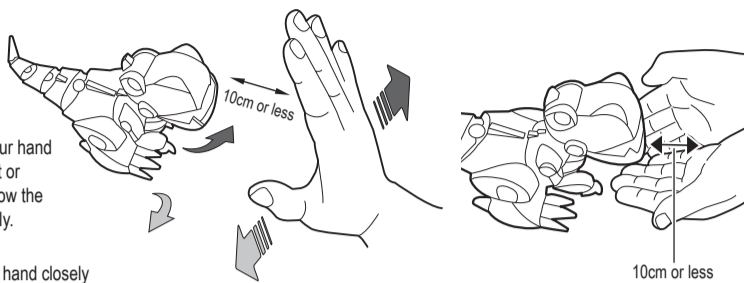

Tricks 1 - (Follow My Hands)


- While the Dino is not running, wave your hand closely in front of Dino from Left to Right or Right to Left. The Dino will roar then follow the direction of your hand to turn immediately.

Tricks 2 - (Feeding)

- While the Dino is not running, put your hand closely in front of Dino's jaw, he will chase your hand for food.


7. Chating Mode

When Dino meets other Dino friend, they will roar and act gently to each other.

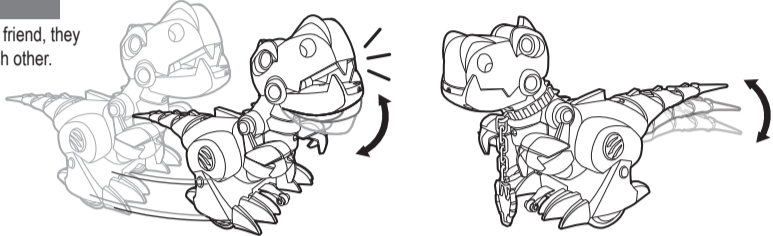

8. Play with the Ball

You can remote control the Dino to play with the Ball.

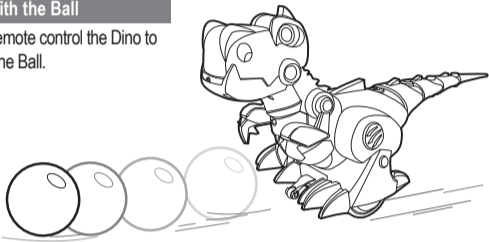

9. Battery saving

1. If the Dino is left alone without any touch, feeding or input from the Transmitter, it will enter to standby mode with its eyes blinking and tail moves. Touch Dino's forehead or use transmitter to wake up the Dino.
2. Dino will stop running when he is tipped over, place the Dino on flat surface and touch his forehead to activate the Dino again.

The Dino will automatically enter sleep mode after 3-4 minutes when not in use. To turn it on again, simply switch the ON/OFF switch to 'OFF' position and then 'ON' position again.


Symptom	Cause	Correction
The Dino does not response.	- The Dino is switch off ("OFF"). - The battery of the Dino is weak.	- Set the power switch to "ON". - Replace the battery of the Dino.
The Dino suddenly stops when operation.	- The battery of the Dino is weak. - Dino is tipped over	- Replace the battery of the Dino. - Place the Dino in flat surface and touch his forehead.
Loss of control.	- Another infrared control device using the same frequency band. - Affected by strong lighting.	- Avoid these if possible, or choose another place to operate the Dino. - Change another environment to avoid direct lighting.

Train My Dino™


Become our fan on facebook
facebook.com/SilverlitToys

Visit us at
www.Silverlit.com

Part Identification

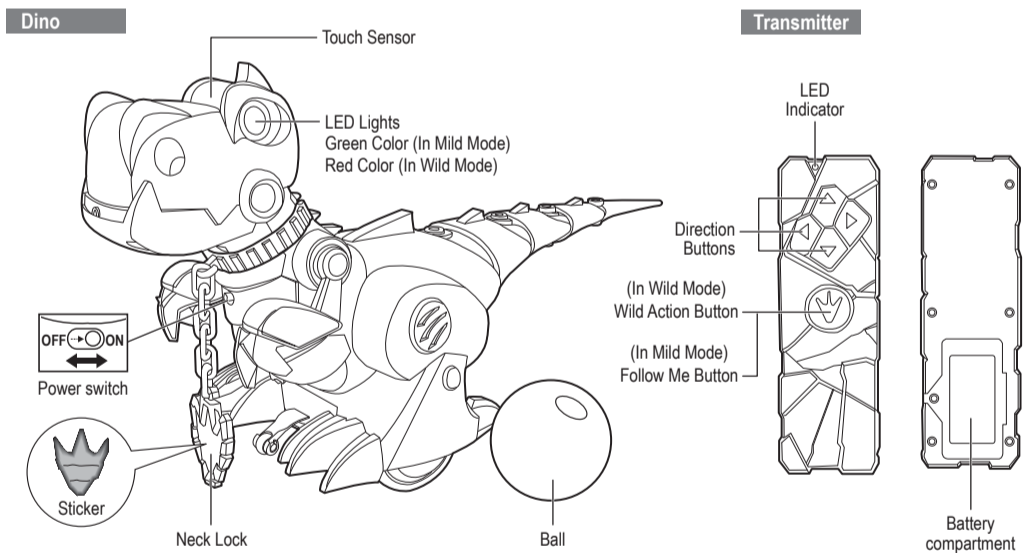


Battery Installation: Transmitter

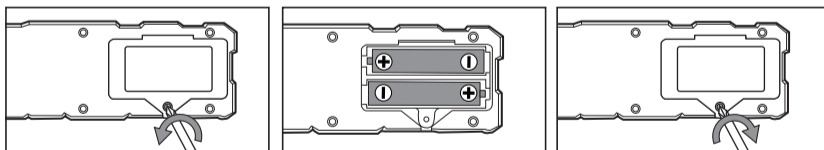

1. Open the battery compartment by loosening the screw.
2. Put 2 "AAA" size batteries in the battery compartment as per the polarity shown inside.
3. Place back the battery cover.

Warning !


Remove these batteries from the unit by pulling up on one end of each battery positive by hand.

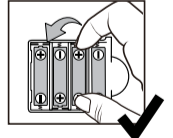

DO NOT remove or install batteries using sharp or metal tools.

Battery Installation: Dino

Dino Battery Installation (*Make sure the power switch is on "OFF" position.)

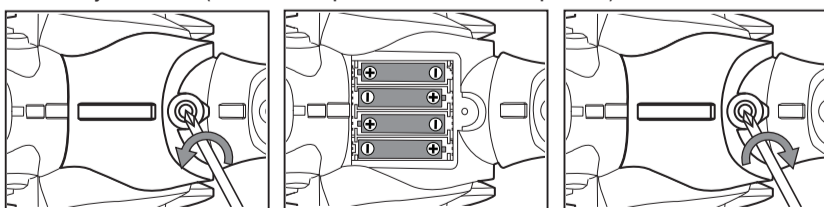


1. Open the battery compartment by loosening the screw.
2. Put 4 "AAA" size batteries in the battery compartment as per the polarity shown inside.
3. Place back the battery cover.

Getting Started

1. Operation

- Slide the ON/OFF Switch to ON position to turn ON the Dino (fig. 1).
- Touch Dino's forehead or Press any button on transmitter to wake up the Dino (fig. 2).
- Depends on the Dino's neck lock is attached or detached, Dino's behavior will be different (See part 3 & 4 for detail).
- Dino will be at Wild Mode behavior when you start to play.
- Dino will become mild after you put the neck lock on his neck.
- Dino's behavior and reaction will be different in both mode.

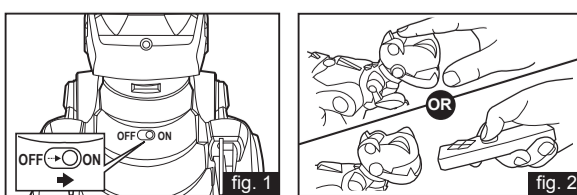


For Ages 5+ • Ab 5 Jahre • Pour 5 ans et plus • Voor leeftijd 5+ • Para 5+ años • Dai 5 anni in su • Для детей от 5 лет • Para idades superiores a 5 anos

WARNING:
Not suitable for children under 36 months, Small Parts, Choking Hazard.



TRAIN MY DINO

Delivery contents

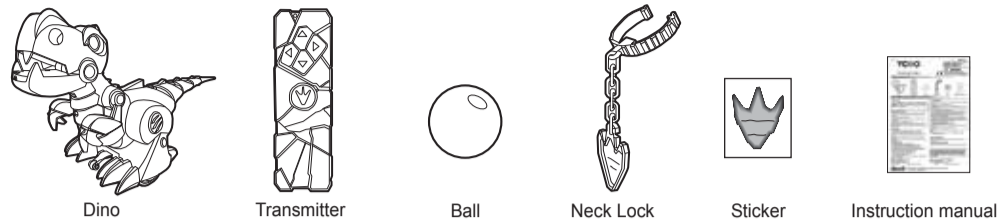

Precautions, Warnings & Statements

WEEE
When this appliance is out of use, please remove all batteries and dispose of them separately. Bring electrical appliances to the local collecting points for waste electrical and electronic equipment. Other components can be disposed of in domestic refuse.

Safety Precautions:

- Parents, this toy is recommended for children. To ensure that your child's play time is both safe and fun, please review the operating instructions with your children.
 - Do not pick up the toy when it is moving.
 - Keep hands, hair and loose clothing away from any moving parts when the toy is turned ON.
 - Remove battery from the toy when not in use.
- Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Statements

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
1) This device may not cause harmful interference, and
2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Special notes:

- Parental guidance is recommended when installing or replacing batteries.
 - Please read the operation instructions carefully prior to the first use.
 - You are advised to replace with new batteries as soon as the function becomes impaired.
 - Instruction sheet and packaging must be retained since it contains important information.
 - Users should keep strict accordance with the instruction manual while operation the product.
- Battery warnings:**
- Non-rechargeable batteries are not to be recharged.
 - Rechargeable batteries are to be removed before being charged.
 - Rechargeable batteries should be charged under adult supervision.
 - Different types of batteries or new and used batteries are not to be mixed.
 - Only batteries of the same or equivalent type as recommended are to be used.
 - Batteries are to be inserted with correct polarity. (+ and -)
 - Exhausted batteries are to be removed from the product.
 - The supply terminals are not to be short-circuited.
 - Do not mix old and new batteries.
 - Do not mix alkaline batteries, standard batteries (carbon-zinc) and rechargeable batteries (nickel-cadmium).

Battery requirements for Dino:

- Power supply
- Battery ratings : DC 6 V , 4.8 W
- Batteries : 4 x 1.5 V "AAA"/LR03/AM4 (not included)

Notes:

- New alkaline batteries are recommended to use in this product to obtain best and maximum performance

Care and Maintenance:

- Always remove batteries from the product when it is not being used for a long period of time.
- Wipe the product gently with a clean cloth.
- Keep the product away from direct heat.
- Do not submerge the product into water that can damage the electronic assemblies.

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

Battery requirements for Transmitter:

- Power supply
- Battery ratings : DC 3 V , 0.09 W
- Batteries : 2 x 1.5 V "AAA"/LR03/AM4 (not included)



Silverlit SAS, 80 rue Barthelemy Danjou, 92100 Boulogne-Billancourt / France.
© 2024 Silverlit. All rights reserved.

2. Remote Control

Forward and Backward


- Press the forward button to control Dino go forward.
- Press the backward button to control Dino go backward.

Turning Left & Right

- Press the left or right button to make Dino turns left or right direction.

Action Button

- It will be used as "Follow Me" in Mild Mode and "Wild Action" in Wild Mode.

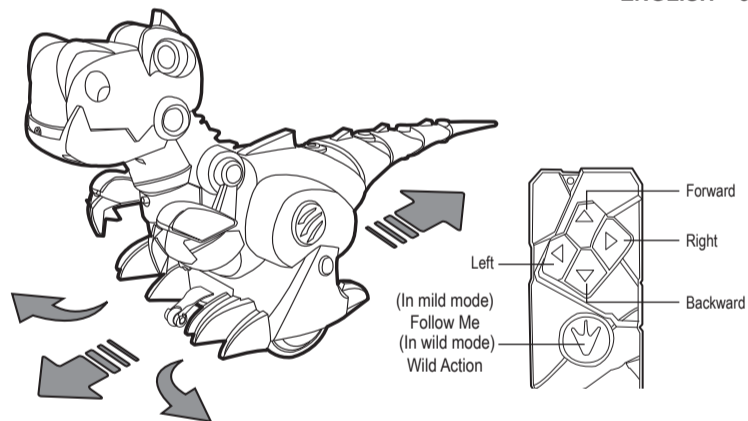

Operation Tips:


1. Operate only on flat, smooth (but not slippery), dry surfaces and low pile carpet, as hair, carpet or dirt can affect the operation of the Dino.
2. Don't operate your Dino in sand or through water or snow, if your Dino get wet, wipe with a towel and allow to dry completely.
3. Don't operate the Dino under the direct bright light. It will affect the remote control signals.
4. When you are operate your Dino, the transmitter should point to the Dino.

3. Wild Mode (without Neck Lock)

The Dino's eyes will be in red color when neck lock is detached, that means the Dino is in Wild Mode.

Pet the Dino

- You can pet the Dino by touch its forehead and the Dino will roar and run randomly.

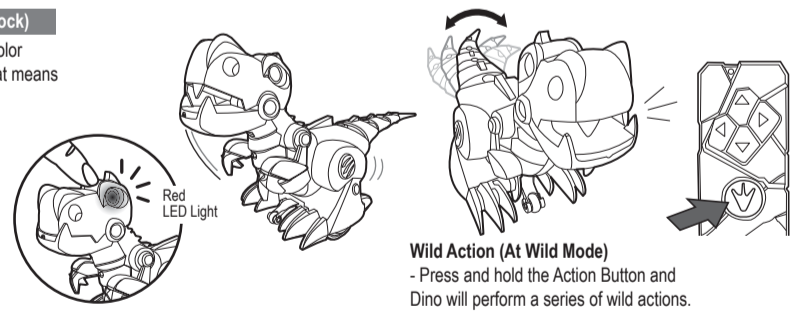

Wild Action (At Wild Mode)

- Press and hold the Action Button and Dino will perform a series of wild actions.

4. Mild Mode (Neck Lock Attached)

The Dino's eyes will be in green color when its neck lock is attached, that means the Dino is in Mild Mode.

Pet the Dino

- You can pet the Dino by touch its forehead and the Dino will perform several mild movements.

Then you can play special tricks with Dino for 20 seconds (see part 6 for details.)

Follow Me (At Mild Mode)

- Press and hold the Action Button on the transmitter, pointing it to the Dino and he will follow your direction to chase accordingly.

